

# Quick Start Guide

For more information about how to use this cellphone, please go to [www.alcatelonetouch.com](http://www.alcatelonetouch.com) to download the complete user manual. Additionally, from the website you can also consult FAQ, find software upgrades, etc.

U.S. Cellular® Customer Care 1-888-944-9400

ALCATEL onetouch®

English - CJB31W001AGA

 
PART# QSGPSW3035US

# Table of contents

1	Your cellphone .....	3
2	Text input .....	13
3	Phone call .....	16
4	Contacts .....	17
5	Messaging.....	18
6	Email .....	19
7	Getting connected.....	20
8	Camera/Camcorder .....	23
9	Telenav GPS .....	23
10	Factory data reset .....	24
11	Applications.....	24
12	FOTA Upgrade.....	25
	Safety and use.....	26
	General information .....	33
	12 MONTH LIMITED WARRANTY .....	34
	Troubleshooting.....	36

## Your cellphone

### 1.1 Keys and connectors

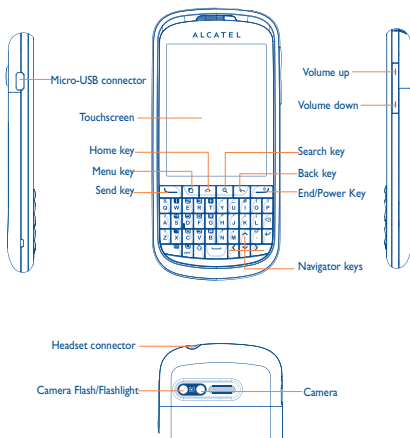

Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your cellphone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.



### Send key

- Go to the call log when you have missed call(s);
- Pick up an incoming call;
- Send an outgoing call;



### Menu key

- Open a list of actions which you can do on the current screen or the options menu.



### Home key

- While on any application or screen, press to return to the Home screen.
- Press and hold to open the recently-used applications window.
- When the screen is locked and the backlight is off, press **Home** or **Power/End** key to light the screen.



### Search key

- Search information on the current screen or application.



### Back key

- Press to go back to the previous screen, or to close a dialog box, options menu, the notification panel, or onscreen keyboard.



### Power / End key

- Short press: End a call  
During incoming call, refuse the call  
Lock the screen
- Long press: Show the pop-up menu to select Silent mode/Airplane mode/Power off



### Volume Keys

- When in call mode, adjust the earpiece or headset volume.
- In Music/Video/Streaming mode, adjust the media volume.
- In general mode, adjust the ring tone volume.



### Navigation Keys

- Press the relevant direction (up, down, right, left) to navigate in various functions.

## 1.2 Getting started

### 1.2.1 Set-up

#### Removing or installing the back cover



#### Installing or removing the battery

Please power off your cellphone before removing the battery.



- Insert and click the battery into place, then close the cellphone cover.
- Unclip the cover, then remove the battery.

#### Installing or removing the MicroSD card

 
To insert the MicroSD card with golden contact facing downwards into the slot until it is locked. To remove, gently push the memory card until it is unlocked.





To remove the MicroSD card while the cellphone is on, you must unmount the storage card from the cellphone first (Press **Menu** key from Home screen, select **Settings\Storage\Unmount SD card**), to prevent corrupting or damaging the storage card.

### Charging the battery

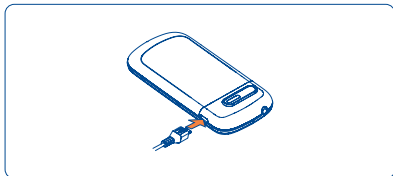

Connect the battery charger to your cellphone and AC power outlet respectively.



To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

### 1.2.2 Power on your cellphone

Hold down the **Power/End** key until the cellphone powers on. It will take a few seconds before the screen lights up.

### Set up your cellphone for the first time

The first time you power on the cellphone, you should set your preferences: Language, KeyBoard, Mobile Data connection, Application Sync, System Updates, Date & time etc. Under the Options Menu.



 
This initial set up can be enabled via touching the Application tab from the Home screen and then touch **JrdSetupWizard**.

### 1.2.3 Power off your cellphone

Hold down the **Power/End** key from the Home screen until the cellphone options appear, select **Power off**.

## 1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your home screen for quick access. Press **Home** key to switch to Home screen.

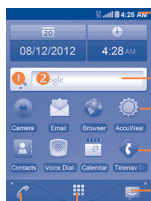

#### Status bar

- Status/Notification indicators
- Touch and Drag down to open the notification panel.

#### Search bar

- Touch **1** to enter Search options: All, Web, Apps, Contacts, etc.
- Touch **2** to enter text search screen.

Touch an icon to open an application, folder, etc.

Touch to access **Messaging**

#### Application tab

- Touch to access the Phone Dial screen.
- Touch to open main menu.
- Long press to display thumbnails.
- Touch to access the Call log if you have missed call(s).

Slide the Home screen horizontally left and right to view the other home screen panes. Small dots at the lower left and right of the screen indicate which screen pane you are viewing.

Touch & hold the Application tab to display thumbnails, touch the thumbnail to open it. Press **Back** key to return to Home screen. You can customize the number of home screen panes by going to **Settings\Display\Home screen settings**.

### 1.3.1 Using the touchscreen

#### **Touch**

To access an application, touch it with your finger.

#### **Touch and Hold**

To enter the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold this contact, options list will then appear on screen.

#### **Drag**

Place your finger on the screen to drag an object to another location.

#### **Slide/Swipe**

Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

#### **Flick**

Similar to swiping, but flicking makes it move quicker.


#### **Pinch/Spread**

Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.






















#### **Rotate**

Automatically change the screen orientation from portrait to landscape by turning the cellphone sideways to have a better screen view.





















### 1.3.2 Status bar

From status bar, you can view both cellphone status (to the right side) and notification information (to the left side). When the status bar is full, “” icon will appear; touch to display hidden icons.

#### **Status icons**

 
	Signal strength		TTY connected
	No signal		GPS is on and active
	IX CDMA connected		Headset connected
	IX CDMA in use		Vibrate only mode
	EvDo connected		Speakerphone is on
	EvDo in use		Silent mode-no audio or vibration
	Airplane mode		Bluetooth is on
	Data synchronizing		Bluetooth device connected
	Synchronization error		No battery
	Wi-Fi® signal strength		Unknown battery
	indicates that battery is remaining (Empty to full charge states)		

## Notification icons

	Call in progress		Downloading data
	Missed call		Uploading data (animated)
	Connected to a computer via USB cable		General Warning Icon
	Storage card memory is low		Song is playing
	More (not displayed) notifications		No microSD™ card installed
	New Email		microSD™ card is being prepared
	New voicemail		Upcoming event
	New message		Microphone is muted
	Problem with text or multimedia message delivery		Alarm is set
	Connected to or disconnected from VPN		Wi-Fi® is on and wireless networks are available

## Notification panel

Touch and drag down the Status bar or press **Menu** key and touch **Notifications** to open the notification panel. Touch and drag up to close it. From Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

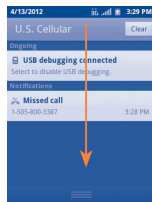

Touch **Clear** to clear all event-based notifications (other ongoing notifications will remain).

### 1.3.3 Search bar

The cellphone provides a Search function which can be used to locate information within applications, the cellphone or the web.

### 1.3.4 Lock/Unlock your screen

To protect your cellphone and privacy, you can lock the cellphone screen by creating a variety of patterns or passwords, etc. Press **Menu** key from Home screen, select **Settings\Location & security\Set up screen lock**.

### 1.3.5 Personalize your Home screen

#### Add

Touch and hold an empty area or press **Menu** key and touch **Add** on the Home screen, you can add shortcuts, widgets or folders to the Home screen.

#### Reposition

Touch and hold the item to be repositioned to activate the Move mode, drag the item to desired position, then release. Hold the icon on the left or right edge of the screen to drag the item to another Home screen page.

#### Remove

Touch and hold the item to be removed to activate the Move mode, drag the item to the top of the trash can, which will then turn red, and release.

## Wallpaper customization

Touch and hold an empty area or press **Menu** key and touch **Wallpaper** on the Home screen to customize wallpaper.

## Home screen settings

Press the **Menu** Key from the Home screen and touch **Settings\Display\Home screen Settings** to set the number of Home screens.

 
### 1.3.6 Application tab

Touch  from the Home screen to enter applications list.

To return to the Home screen, press the **Home** key.

## Recently-used applications

To consult recently-used applications, you can press and hold the **Home** key from the Home screen. Touch an icon in the window to open the related application.

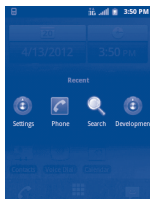

### 1.3.7 Ringtone settings


You can set phone ringtone, notification ringtone and audible touch tones to your preference by pressing the **Menu** Key from the Home screen and then touch **Settings\Sound**.

### 1.3.8 Volume adjustment

You can set ringer, media and cellphone ringtone volume to your preference by touching the **Volume up/down** key, or press the **Menu** Key from the Home screen and then touch **Settings\Sound**.

 
## 1.4 Applications list

The Applications list contains all pre-embedded and newly installed applications.

To access the Applications list, touch  from the Home screen. To return to the Home screen, press the **Home** key.

## 2 Text input

### 2.1 Using Hardware Keyboard



#### **Fn key**

- Press once to input upper character.
- Press twice to lock upper inputting mode, then press once to unlock upper inputting mode.

#### **Caps key**

- Press once to enter the “Abc” mode: The first letter will be capital, after inputting the first letter, switch back to “abc” mode automatically.
- Press twice to enter the “ABC” mode: All letters will be locked as capital letters.

#### **Space key**

- Press to input space.

#### **Delete key**

- Short press: delete one letter before the cursor.
- Long press: delete whole words one by one quickly.



### Emoticon key

- Short press: enter ".".
- In standard keyboard, press **Fn + Emoticon key** to display emoticon box.



### Symbol key

 
- Short press: display symbol box.
- In standard keyboard, press **Fn key** and **Symbol key** to enter 0.



### Enter key

- Select the highlighted button or option.
- Confirm the edited content.
- Move the cursor to the beginning of the next line.

## 2.2.1 Standard keyboard

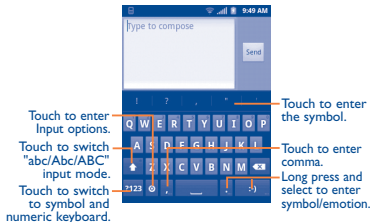

## 2.2.2 TouchPal Input

Press **Menu** key from the Home screen, select **Settings\Language & keyboard\TouchPal Input\Help** to learn how to use this keyboard.



## 2.2 Using Onscreen Keyboard

### Enable/Disable the onscreen keyboard

Press **Menu** key from the Home screen, select **Settings\Language & keyboard\Soft keyboard switch**, mark/unmark the **Landscape mode** or **Portrait mode** checkbox to enable/disable the Onscreen Keyboard. The keyboard won't display automatically in the portrait mode by default.

### Onscreen keyboard settings

Press **Menu** key from Home screen, select **Settings\Language & keyboard\TouchPal Input** (or **Standard keyboard**), a series of settings are available for your selection.

### Adjust the onscreen keyboard orientation

Turn the cellphone sideways or upright to adjust the Onscreen Keyboard Orientation. You can also adjust it by changing the settings (Press **Menu** key on the Home screen, touch **Settings\Display\Auto-rotate screen**).

## 2.3 Text editing

You can edit the text you have entered.


- Touch and hold text you want to edit
- Options list pops up
- Select the operation you need (**Select word**, **Select all**, **Cut**, **Copy**, etc.)

 




## 3 Phone call .....


### 3.1 Placing a call

You can easily launch a call using **Phone**. Enter this menu using one of the following two ways:

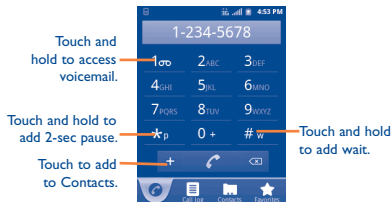- Touch  or the  key from the Home screen.
- Touch Application tab from the Home screen and select **Phone**.




Enter the desired number from the keyboard directly or select a contact from **Contacts**, **Call log** or **Favorites** by touching tabs, then touch  or the  key to place the call.


The number you entered can be saved to **Contacts** by touching  or pressing **Menu** key and touching **Add to contacts**.


You can delete the incorrect digits by touching .

To hang up a call, touch  or press the  key.

### 3.2 Answering or rejecting a call

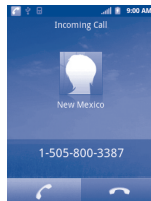 

When you receive an incoming call, tap the green cellphone icon or press the  key to answer.

When you receive an incoming call, but don't want to answer, you may decline it by tapping the red cellphone icon or pressing the  key. The caller is sent directly to your voicemail box to leave a message.

### 3.3 Consulting your call log

You can access your call log by touching  from the Home screen or touching  key, and touching **Call log** to view call history in categories of **Missed calls**, **Outgoing calls**, and **Incoming calls**.

## 4 Contacts.....

You can view and create contacts on your cellphone and synchronize these with your Email contacts or other applications on the web or on your cellphone.



When using Contacts for the first time you are required to add new contacts, and synchronize contacts from other application accounts to your cellphone.

### 4.1 Adding a contact

Touch Application tab on the Home screen, select **Contacts**, then press the **Menu** key from contacts list screen and touch **New contact**.

## 4.2 Importing , exporting and sharing contacts

From Contacts screen, press **Menu** key to open contacts list option menu, touch **Import/Export**, then select **Import from SD card** or **Export to SD card** or **Share visible contacts**.

To import vCard from a microSD card, touch **Import from SD card**, then you can choose to import one/multiple/all vCard files, touch **OK** to confirm.

To export all contacts to a microSD card, touch **Export to SD card**, then touch **OK** to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Messaging, etc.

Touch a contact you want to share, press **Menu** key and touch **Share** from contact details screen, then select the application to perform this action.

## 4.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your cellphone.

 
# 5 Messaging.....

You can create, edit and receive SMS and MMS with this cellphone.

To access this feature, touch Application tab from the Home screen, then select **Messaging**.

### 5.1 Write message

On message list screen, touch **New message** to write text/multimedia messages.

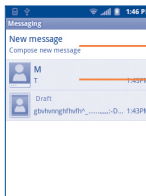

Touch to create a new message.

Touch to view the whole message thread.

### Sending a text message

Enter cellphone number of the recipient on **To** bar or touch  to add recipients, touch **Type to compose** bar to enter the text of the message. When finished, touch **Send** to send the text message.



An SMS of more than 160 characters will be charged as several SMS. Special letters (accent) will also increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

### Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible cellphones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or subject or email addresses added.

# 6

## Email .....

Besides your Email account, you can also set-up external POP3 or IMAP email accounts in your cellphone.

To access this function, touch Application tab from Home screen, then select **Email**.

An email wizard will guide you through the steps to set-up an email account.

- Enter the address and password of the account you want to set-up.

- Touch **Next**. If the account you entered is not provided by your service provider in the cellphone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.

- Enter the account name and display name in outgoing emails.

- Touch **Done**.

- To add another email account, press **Menu** key and touch **Accounts** then press **Menu** key again and touch **Add account** to create.

### To create and send emails

- Press **Menu** key from Inbox screen, and touch **Compose**.
- Enter recipient(s) email address in **To** field, and if necessary, press **Menu** key and touch **Add Cc/Bcc** to include a copy or a blind copy to the message.
- Enter the subject and content of the message.
- Press **Menu** key, touch **Add attachment** to send an attachment to the receiver.
- Finally, touch **Send**.
- If you do not want to send the mail right away, you can touch **Save as draft** or press **Back** key to save a copy.

## 7 Getting connected

To connect to the Internet with this cellphone, you can use CDMA / EvDo networks or Wi-Fi, whichever is most convenient.

### 7.1 Connecting to the Internet

#### 7.1.1 CDMA / EvDo

The first time you turn on your cellphone, it will automatically configure network service: CDMA / EvDo auto.

To check and change the network connection you are using, press **Menu** key on the Home screen, then touch **Settings\Wireless & networks\Mobile networks\Network Mode**.

#### 7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your cellphone is within range of a wireless network.

#### To turn Wi-Fi on and connect to a wireless network

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks**.
- Mark/Unmark the Wi-Fi checkbox to turn on/off Wi-Fi.
- Touch **Wi-Fi settings**. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact network operator for details). When finished, touch **Connect**.

### 7.2 Browser.....

Using the Browser, you can enjoy surfing the Web.

To access this function, touch Application tab from Home screen, then touch **Browser**.

#### To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch .

### 7.3 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your cellphone's MicroSD card and the computer.

#### To connect/disconnect your cellphone to/from the computer

To connect your cellphone to the computer:

- Use the USB cable that came with your cellphone to connect the cellphone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notifications panel and touch **USB connected**.
- Touch **Turn on USB storage** in the dialog that opens to confirm that you want to transfer files.

To disconnect:

- Unmount the MicroSD card on your computer.
- Open the Notifications panel and touch **Turn off USB storage**.

**To locate data you have transferred or downloaded in your MicroSD card:**

- Touch Application tab from the Home screen to open the applications list.
- Touch **My Files**.

All data you have downloaded is stored in **My Files**, where you can view media files (videos, photos, music and others), rename files, install applications into your cellphone, etc.

## 7.4 Connecting to Bluetooth devices <sup>(1)</sup>

Bluetooth is a short-range wireless communication technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

To access this feature, press **Menu** key from the Home screen, touch **Settings\Wireless & networks\Bluetooth** or **Bluetooth settings**.

**To pair/connect your cellphone with a Bluetooth device**

To exchange data with another device, you need to turn Bluetooth on and pair your cellphone with the Bluetooth device with which you want to exchange data.

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks\Bluetooth settings**
- Touch **Scan for devices**
- Select a Bluetooth device you want to be paired with in the list.
- Enter a passcode (0000 or 1234)
- If the pairing is successful, your cellphone connects to the device.

<sup>(1)</sup> You are recommended to use ALCATEL ONE TOUCH Bluetooth headsets, which have been tested and proven compatible with your cellphone. You can go to [www.alcatelonetouch.com](http://www.alcatelonetouch.com) for more information about ALCATEL ONE TOUCH Bluetooth headsets.


# 8 Camera/Camcorder

Your cellphone is fitted with a Camera and a Camcorder for taking photos and shooting videos.



Before using the Camera or Camcorder, please ensure that a MicroSD card where all pictures and videos are stored is correctly installed. Also, be sure to open the protective lens cover before use to avoid it affecting your picture quality.

To access this function, touch Application tab from the Home screen and then touch **Camera** or **Camcorder**.

**To take a picture**

The screen acts as the viewfinder. First position the object or landscape in the viewfinder, and touch  icon to take the picture, which will be automatically saved.

**To shoot a video**

Switch Camera mode to Video mode or access Camcorder directly from the applications list. First position the object or landscape in the viewfinder, and touch  icon to start recording. Touch  icon to stop recording. The video will be automatically saved.

# 9 Telenav GPS

With Telenav GPS, get all of the features of an advanced car navigation system on your mobile phone with voice turn-by-turn navigation enabled by GPS. Search for any destination including gas stations, ATMs, restaurants, and more. Get detailed maps of any location.

- In order to use Telenav GPS, you must first turn on your phone's location and GPS settings. (Press **Menu** key from the Home screen, touch **Settings\Location & security\Use GPS satellites**).
- From the Applications tab select **Telenav GPS**.

From the Telenav GPS Home screen you can select:

- **Drive To** for turn by turn direction to an address, airport, contacts addresses and more
- **Places** to search for nearby businesses, the cheapest gas prices and more

- **Maps & Traffic** to see where you currently are located on a map and what traffic is in the area

## 10 Factory data reset

To activate factory data reset:

- Press **Menu** key from Home screen
- Touch **Settings\Privacy\Factory data reset**
- Touch **Reset phone**

Cellphone reset will erase all of your personal data from internal cellphone storage, including information about your Email Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the cellphone does not erase any system software updates you've downloaded or any files on your MicroSD card, such as music or photos. If you reset the cellphone in this way, you're prompted to re-enter the same kind of information as when you first started your phone.

When you are unable to power on your cellphone, there is another way to perform a factory data reset by using hardware keys. Hold down **Home** key and press **Power/End** key at same time until the screen turns into warning screen, then press **Home** key again.

## 11 Applications

With this cellphone, some built-in applications and other third party applications are available for your convenience.

With the built-in applications, you can

- Communicate with friends
- Exchange messages or emails with friends
- Track your location, view traffic situations, search for locations and get navigation information to your destination
- Download more applications from browser and more.

For more information about these applications, please check user manual online: [www.alcatelonetouch.com](http://www.alcatelonetouch.com).

## 12 FOTA Upgrade

Using FOTA Upgrade tool you can update your phone's software.

There are two ways to access FOTA Upgrade:

### Client Initiated:

Press **Menu** key, then touch **Settings\About phone\Software update**. Make sure your battery is charged or more than 20%, then touch **Check for update** and the phone will search for the available update. Your phone will automatically download update in background after it done. (Downloading update will only proceed in home network) Touch **Now** to complete the upgrade or **Later** to install later.

### Network Initiated:

If your phone receive package notification from DM server in home network and battery is charged or more than 20%, package will be downloaded in background till download completed. Touch **Now** to complete the upgrade or **Later** to install later.

If your phone receive package notification from DM server in roaming network, you need to back to home network to download update.



All personal information will be permanently lost following the update process. We recommend you backup your personal data before upgrading.

# Safety and use

We recommend that you read this chapter carefully before using your cellphone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

## • TRAFFIC SAFETY:

Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked. Check the laws and regulations on the use of wireless cellphones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your cellphone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your cellphone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy.

## • CONDITIONS OF USE:

You are advised to switch off the cellphone from time to time to optimize its performance.

Remember to abide by local authority rules of cellphone use on aircrafts. Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow Instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Switch the cellphone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the cellphone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage. It is recommended to have proper supervision while small children use your cellphone.

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.

Always handle your cellphone with care and keep it in a clean and dust-free place.

Do not allow your cellphone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).

Over 55°C (131°F) the legibility of the cellphone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not use the cellphone if the glass made screen, is damaged, cracked or broken to avoid any injury.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your cellphone model.

TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your cellphone. Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-lights feature on your cellphone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the cellphone.

All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.

When you play games on your cellphone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15-minute break every hour of game playing.

- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.

- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



Prolonged exposure to music at full volume using the music player may damage your hearing. Set your cellphone's volume to it's lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and it's affiliates.

#### • **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

#### • **BATTERY AND ACCESSORIES:**

Before removing the battery from your cellphone, please make sure that the cellphone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).

- Do not puncture, disassemble or cause a short-circuit in a battery,

- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C (140°F).

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your cellphone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment

- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

#### **In European Union countries:**

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

#### **In non European Union jurisdictions:**

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at [www.recyclewirelessphones.com](http://www.recyclewirelessphones.com)

**CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

#### • **CHARGERS**

Home A.C./Travel chargers will operate within the temperature range of: 0°C (32°F) to 40°C (104°F).

The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. They are also compliant to the ecodesign directive 2009/125/EC. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

Travel charger:

Input: 100-240 V, 50/60 Hz, 0.15 A

Output: 5 V, 550/1000 mA

Battery:

Lithium 1300 mAh

#### • **RADIO WAVES:**

**THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy.

These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone.

Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested for use at the ear is 1.24 W/Kg @ 1 gram and when properly worn on the body is 1.22 W/Kg @ 1 gram

To meet RF exposure guidelines during body-worn operation, the device should be positioned at least 1.5cm away from the body.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 15 mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n°193).

Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
  - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Your cellphone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.
- As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the cellphone at least 15 mm away from the body.





MicroSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

## ALCATEL One Touch Premiere

### Bluetooth QD ID B018148



TouchPal™ and CoTek™ are trademarks of Shanghai HanXiang (CooTek) Information Technology Co., Ltd. and/or its Affiliates.



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

### Hearing Aid Compatibility

Your cellphone is rated: «For Hearing Aid», to assist hearing device users in finding cellphones that may be compatible with their hearing devices.

Alcatel One Touch Premiere is HAC M3 and T3 compatible.

For more information please refer to «Hearing Aid Compatibility with Mobile Phones» leaflet or visit our website <http://www.alcatelonetouch.com>

## General information

- Website: [www.alcatelonetouch.com](http://www.alcatelonetouch.com)
- Facebook: <http://www.facebook.com/alcatelonetouchusa>
- Twitter: <http://www.twitter.com/alcatel1touch>
- Hot Line Number: In the United States, call 877-702-3444 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: [www.alcatelonetouch.com](http://www.alcatelonetouch.com)

Your cellphone is a transceiver that operates on following networks:  
CDMA in 2G-band (800/1900MHz) (BC0/BC1)  
CDMA in 3G-band (2000MHz 1x EV-DO) (Rev.A)

### Protection against theft <sup>(1)</sup>

Your cellphone is identified by an MEID (cellphone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your cellphone by entering \*#06# and keep it in a safe place. It may be requested by the police or your operator if your cellphone is stolen.

### Disclaimer

There may be certain differences between the user manual description and the cellphone's operation, depending on the software release of your cellphone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

<sup>(1)</sup> Contact your network operator for service availability.

# 12 MONTH LIMITED WARRANTY

Personal Communications Devices, LLC (the "Company") warrants to the original retail purchaser of this cellular handset or wireless device (Product), that should this Product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in the Product's failure within the first twelve (12) month period from the date of purchase (proof of purchase required), such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included with the Product, are similarly warranted for twelve (12) months from the date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced;
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source;
- (g) Product subjected to unauthorized modifications to the software of the Product or to the Product itself;
- (h) Product subjected to the unauthorized opening or repair of the Product;
- (i) Product subjected to hacking, password-mining, jail breaking, the unlocking of the boot loader using the fast boot program or the tampering with or short-circuiting of the battery; or
- (j) Product that has been modified to alter functionality or capability of the Product without the written permission of the Company.

The Company disclaims liability for removal or reinstallation of the Product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to the Company for repair or service, please note that any personal data or software stored on the Product may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your Product before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your Product. In addition, if your Product utilizes a SIM or Multimedia card, please remove the card before submitting the Product and store for later use when your Product is returned. The Company is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any other wireless device, whether under warranty or not, returned to the Company for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the Product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/ or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.



Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. IN USA:

Personal Communications Devices, LLC.  
555 Wireless Blvd.  
Hauppauge, NY 11788  
(800) 229-1235

IN CANADA: PCD Communications Canada Ltd.  
5535 Eglington Avenue West Suite #210  
Toronto, ON M9C 5K5  
(800) 465-9672

## Troubleshooting

Before contacting the service centre, you are advised to follow the instructions below:

- You are advised to fully charge (  ) the battery for optimal operation.
- Avoid storing large amounts of data in your cellphone as this may affect its performance.
- Use User Data Format and the FOTA Upgrade tool to perform cellphone formatting or software upgrading, (to reset User Data format, hold down **Home** key while simultaneously pressing the  key until a warning screen displays, then press **Home** key). ALL User cellphone data: contacts, photos, messages and files, downloaded applications like Java games will be lost permanently. It is strongly advised to fully backup the cellphone data and profile before doing formatting and upgrading.

and carry out the following checks:

### My cellphone is frozen or will not switch on

- Check the battery contacts, remove and reinstall your battery, then turn your cellphone on.
- Check the battery power level, charge for at least 20 minutes.
- If it still does not work, please use User Data Format to reset the phone.

### My cellphone has not responded for several minutes

- Restart your cellphone by pressing and holding the  key.
- Remove the battery and re-insert it, then restart the cellphone.

### My cellphone turns off by itself

- Check that your keypad is **locked** when you are not using your cellphone, and make sure the  key is not mis-contacted due to unlocking keypad.

- Check the battery charge level.

### My cellphone will not charge properly

- Make sure you are using an Alcatel battery and the charger from the box.
- Make sure your battery is inserted properly and clean the battery contact if it's dirty. It must be inserted before plugging in the charger.
- Make sure that your battery is not completely discharged; if the battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen.
- Make sure charging is carried out under normal conditions (0°C to +40°C).
- When abroad, check that the voltage input is compatible.


### My cellphone cannot connect to a network or "No service" is displayed

- Try connecting in another location.
- Verify the network coverage with your operator.
- Try selecting the available network(s) manually.
- Try connecting at a later time if the network is overloaded.

### My cellphone cannot connect to the Internet

- Check that the MEID number (press **\*#06#**) is the same as the one printed on your warranty card or box.
- Check your cellphone's Internet connecting settings.
- Make sure you are in a place with network coverage.
- Try connecting at a later time or another location.

### Unable to make outgoing calls

- Make sure you have dialed a valid number and have pressed the  key.
- For international calls, check the country and area codes.
- Make sure your cellphone is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status with your operator (credit for example).
- Make sure you have not barred outgoing calls.
- Make sure that your cellphone is not in flight mode.


### Unable to receive incoming calls

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network).
- Check your subscription status with your operator (credit for example).
- Make sure you have not forwarded incoming calls.
- Make sure that you have not barred certain calls.
- Make sure that your cellphone is not in flight mode.

### **The caller's name/number does not appear when a call is received**

- Check that you have subscribed to this service with your operator.
- Your caller has concealed his/her name or number.

### **The sound quality of the calls is poor**

- You can adjust the volume during a call by pressing the **Volume Up/Down** key.
- Check the network strength .
- Make sure that the receiver, connector or speaker on your cellphone is clean.

### **I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service.
- Make sure this feature does not require an Alcatel accessory.

### **When I select a number from my contacts, the number cannot be dialed**

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country prefix when calling a foreign country.

### **I am unable to add a contact in my contacts**

- Delete some files in the cellphone contacts (i.e. your professional or personal directories).

### **My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability.

### **I cannot access my voicemail**

- Make sure your operator's voicemail number is correctly entered in "My numbers".
- Try later if the network is busy.

### **I am unable to send and receive MMS**

- Check your cellphone memory availability as it might be full.
- Contact your network operator to check service availability and check MMS parameters.
- Verify the server centre number or your MMS profile with your operator.
- The server centre may be swamped, try again later.

### **I am unable to connect my cellphone to my computer**

- Check that your USB driver is installed properly.
- Make sure that you're using the right cable from the box.

### **I am unable to download new files**

- Make sure there is sufficient cellphone memory for your download.
- Select the Micro-SD card as the location to store downloaded files.
- Check your subscription status with your operator.

### **The cellphone cannot be detected by others via Bluetooth**

- Make sure that Bluetooth is turned on and your cellphone is visible to other users.
- Make sure that the two cellphones are within Bluetooth's detection range.

### **How to make your battery last longer**

- Make sure you follow the complete charge time (minimum 3 hours).
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication.
- Switch on the backlight upon request.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information on manual demand, or increase their auto-check interval.
- Exit background-running applications if they are not being used for a long time.
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use.

ALCATEL is a trademark of Alcatel-Lucent  
and is used under license by  
TCT Mobile Limited.

© Copyright 2011 TCT Mobile Limited  
All rights reserved

TCT Mobile Limited reserves  
the right to alter material  
or technical specification  
without prior notice.